



Robot Sensor

Encourage your class to become
programming and control experts.



User Guide

www.tts-group.co.uk




Important Information

- Please retain the information in this User Guide for future reference.
- Please read all instructions fully before using.
- To clean, wipe the surface with a clean damp cloth.
- Do not allow the product to come into contact with water or any other liquids.
- Keep the product away from direct sunlight and heat.
- If your product malfunctions please switch it off and then back on again to reset it.

Pack Contents

- Robot Sensor
- User guide

Know Your Product

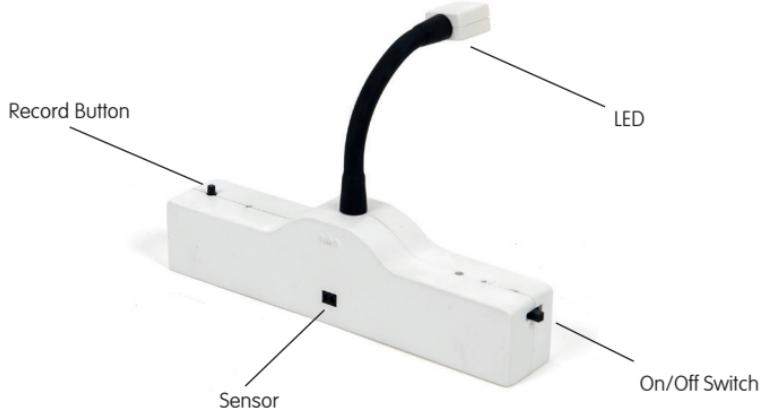

Robot Sensor

Using Your Product

- To switch on, move the On/Off switch to the on position.
- There are 10 seconds are record time available.
- To make a recording press and release the black button on the top, the LED will light red to indicate recording has started and a single beep will sound.
- When you have finished the recording press the black button again, the LED will go out and a double beep will sound.
- When the robot moves within approximately 5cm in front of the sensor, it will activate the sensor to play back the recording.
- Once the sensor has been activated, it cannot be activated again for 10 seconds.

Battery Precautions

- This product is powered by 3 x AAA batteries (not included).
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short circuited.
- Only batteries of equal size and type should be used.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.

Replacing Batteries

- Remove the battery hatch cover and carefully remove the batteries and dispose of them responsibly.
- Insert new batteries, ensuring the correct polarity. Replace the battery hatch firmly and accordingly.
- Different types of batteries or new and used batteries are not to be mixed.
- Exhausted batteries are to be removed from the toy.



Trouble Shooting

Problem	Solution
Product will not record	Ensure that the slide switch is set to 'ON'
Audio is quiet or distorted	Sound is too far or too close to the microphone or the batteries need replacing
Sensor is not working	Ensure you are within the specified distance

Technical Support

Please visit www.tts-group.co.uk for the latest product information.

Email feedback@tts-group.co.uk for technical support.

TTS Group Ltd.
Park Lane Business Park
Kirkby-in-Ashfield
Nottinghamshire
NG17 9GU, UK.
Freephone: 0800 318686 Freefax: 0800 137525

WARNING: Do not dispose of this product in household waste.

WARNING: Hand it over to a collection point for recycling electronic appliances.

WARNING: Not suitable for children under 36 months due to small parts- choking hazard.

Made in China, on behalf of TTS Group Ltd.

TTS Product Code:

IT10101



TTS is proud to be part of **RM** plc